




Quick Start Guide

Welcome to your new REMOTE LIVE.



Fittings of Remote Live

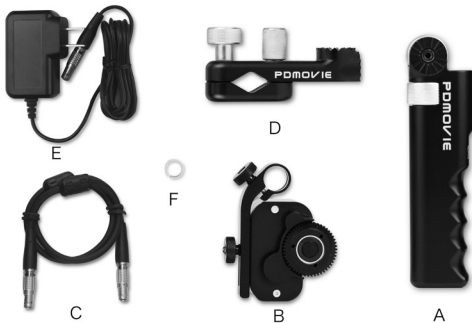

Configuration Checklist of Remote

No.	Name	PDL	PDL-HT
A	Unibody control handle	1	1
B	Follow focus motor (EF)	1	
	Follow focus motor (MAX)		1
C	Motor drive line	1	1
D	Clamp	1	1
E	Power adapter	1	1
F	15MM/19MM adapter ring	1	1

Operation Instruction

1. Loosen the hand wheel on the top of the handle, rotate the clamp to proper angle in clockwise or anticlockwise direction, then fasten the hand wheel.


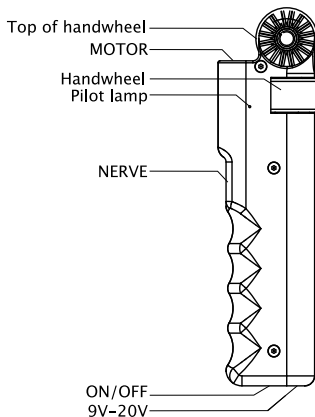


Diagram of the body

2. Manually unscrew the nuts on both ends of the clamp simultaneously; expand the inner diameter of the clamp to fix it on the equipment. The clamp has three mounting surfaces, you can choose any surface to fix the handle; the M8 internal holding screw on the top of handle can be extended to both sides (use the M2 Allen key in the fittings package, loosen the M8 internal holding screw on the top of handle, then use the M4 Allen key to adjust M8 holding screw to proper direction), as shown in the following figure.

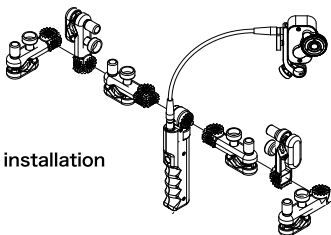

Multi angle installation

3. Fix the motor on the 19MM conduit, or on the 15MM conduit with the aid of 15MM/19MM adapter ring, seize up lens with motor cog-wheel, and use motor wire to simultaneously connect motor and the ten-pin motor interface on the top of handle;


4. Long press the ON/OFF at the bottom for two seconds, and do not release the start control handle until the blue light goes on, the current electricity of Remote Live will be shown when the light turns from blue to white;

Status	Capacity	LED
Normal operation	75%-100%	White
	50%-75%	Green
	25%-50%	Yellow
	Below 25%	Red
Getting charged		Purple

Correspondence between LED display and electric capacity

5. Long press the NERVE button for three seconds, and do not release until the lens rotate, Remote Live will detect the stroke of lens automatically, which will stop at the middle position of lens upon detection is completed.



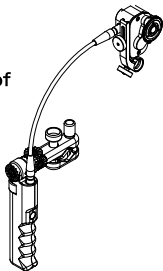






Installation diagram of Remote Live



Notes:

1. Get the product fully charged before first use;
2. When clamping lens with motor cog-wheel, do not attach too tightly in order to avoid excessive resistance to lens;
3. If the LED is in red, it indicates the battery is low, which required immediate charge;
4. The product contains Li-ion cell, so dismantle of shell is strictly forbidden, to avoid cell damage or other dangers.

Remote Live Functions

Button & Interface	Function	Operation Instruction		
On/Off	Start-up	 Long press for two seconds, do not release until blue light goes on		
	Shutdown	 Long press for two seconds, do not release until red light appears		
Nerve	Automatic stroke detection	 Long press for three seconds, do not release until lens rotate		
	Forward/backward shift of drive wheel	 Five continuous short presses		
	Linear buffer mode shift	 Seven continuous short presses		
	Manually set up the stroke (Point AB)	Setup	  Two presses: first is short press; then is long press, and set Point AB by toggling the hand wheel at the same time, do not release until it is finished;	
		Revoke	 Two continuous short presses to revoke the set stroke;	
	Invoke previous manual stroke	 Short press after re-start, Remote Live will automatically restore the previously saved stroke setup		
Motor	Connecting interface for motor wire			
9V-20V	9V-20V wide voltage charge			



REMOTE LIVE Simple installation

Important

Please read this document, master REMOTE LIVE usage, Before you first use your REMOTE LIVE.

Learn more

You can find more information, watch demos, and learn even more about REMOTE LIVE features at www.pdmovie.com/remotelive/.

Support

REMOTE LIVE enjoy free upgrade program and one year of hardware warranty period, you can get these services from PDMOVIE dealer.

Contact

Email:

pd@pdmovie.com

WEB:

www.pdmovie.com